



Technical Manual

STEREO PASSIVE CONTROLLER

RHC10

Table of Contents

Specifications	1
Parts List	2
Wiring Diagram	3
PCB Assembly	4
Schematic Diagram	5,6

Specifications

Input (1-5) Impedance....	10 kohms
Main Out Impedance....	Source impedance
Crosstalk (20-20kHz)	80dB
Channel Separation (20-20kHz)	75dB
Inputs	5 (five) unbalanced
Outputs.....	2 (two) unbalanced output (Rec Out & Main Out)
Dimensions (overall).....	470 (W) × 76 (H) × 332 (D) mm 18-1/2" × 3" × 13-1/16"
Weight	5.0kg/12.1 lbs

- Specifications and design subject to possible modification without notice.


Serial No.
Beginning


Parts List

SYMBOL	PARTS NO.	DESCRIPTION
	E-1167	PCB ASSEMBLY
R513, R514	054 MK2100RFE CZ	R. METAL 1% 100Ω
R515~524	054 MK23K32FE CZ	R. METAL 1% 3.32K
S501, S502	062 C-4407A01	ROTARY SWITCH
VR501	151 C-4408A01	VOLUME
	066 PK4-33A00T	2P PINJACK
	OTHERS	
	011 PK2-01A00	FRONT PANEL
	012 PK4-13A00	KNOB 23 ϕ


SYMBOL	PARTS NO.	DESCRIPTION
	012 PK4-14A00	KNOB 33 ϕ (WF)
	012 PK4-15B00	KNOB 33 ϕ (WR)
	014 PK3-05A00	UPPER COVER
	014 PK3-24A00T	SIDE WOOD BOARD
	015 TRP-558	PRINTED REAR CHASSIS
	019 PK4-07A00T	METAL FOOT
	069 PK4-25A00T	EATH TERMINAL
	081 PK4-38A01	INSIDE CARTON


Wiring Diagram

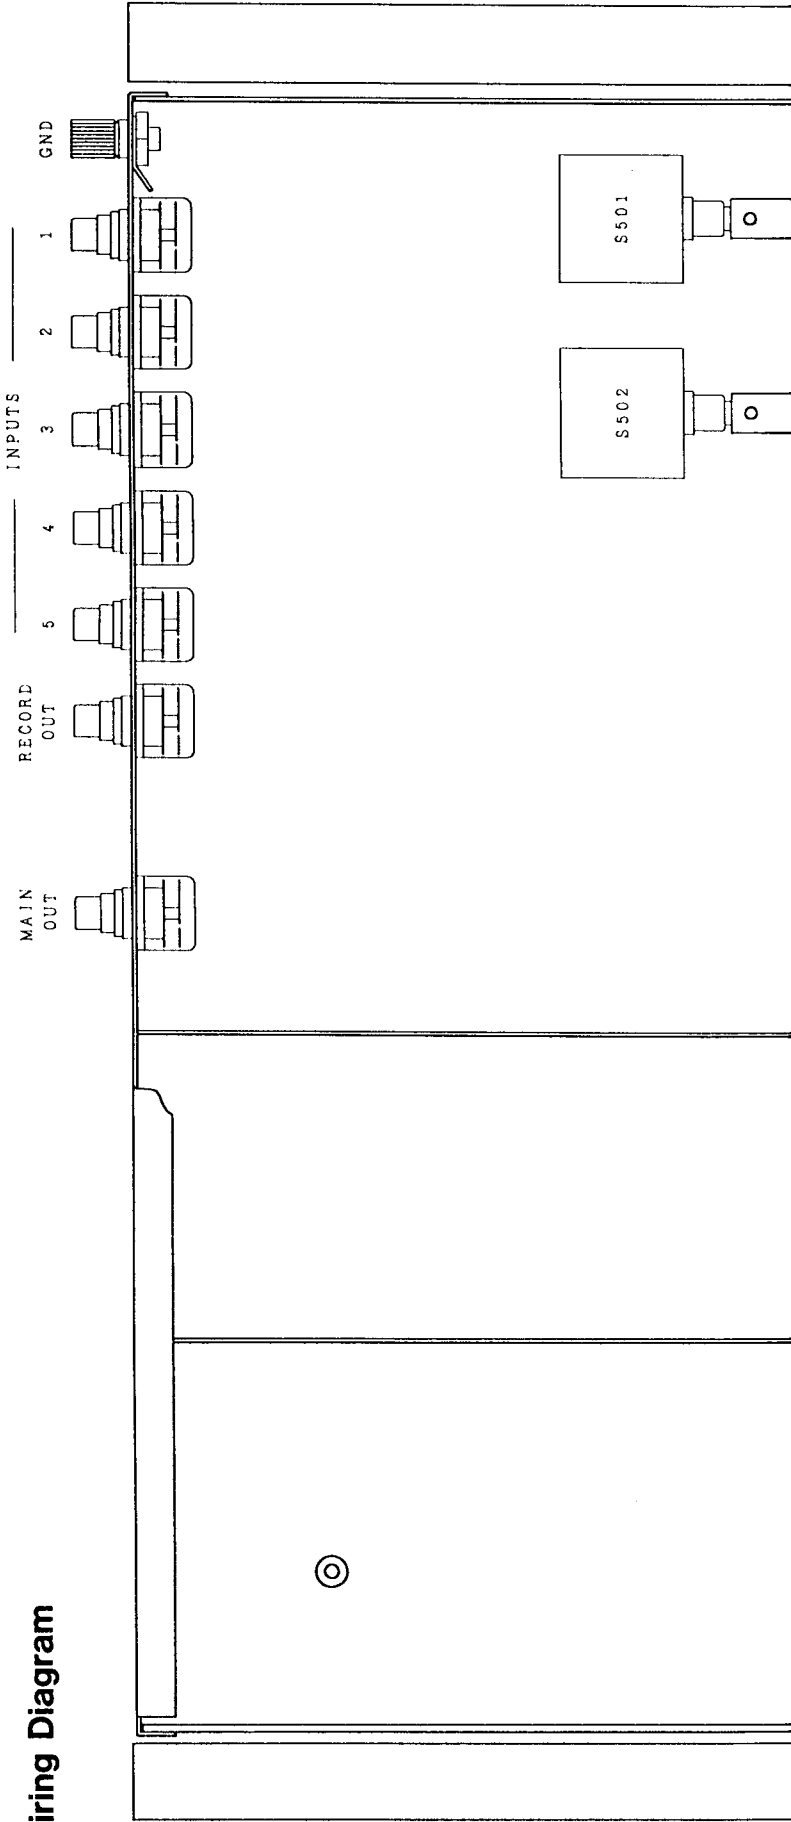

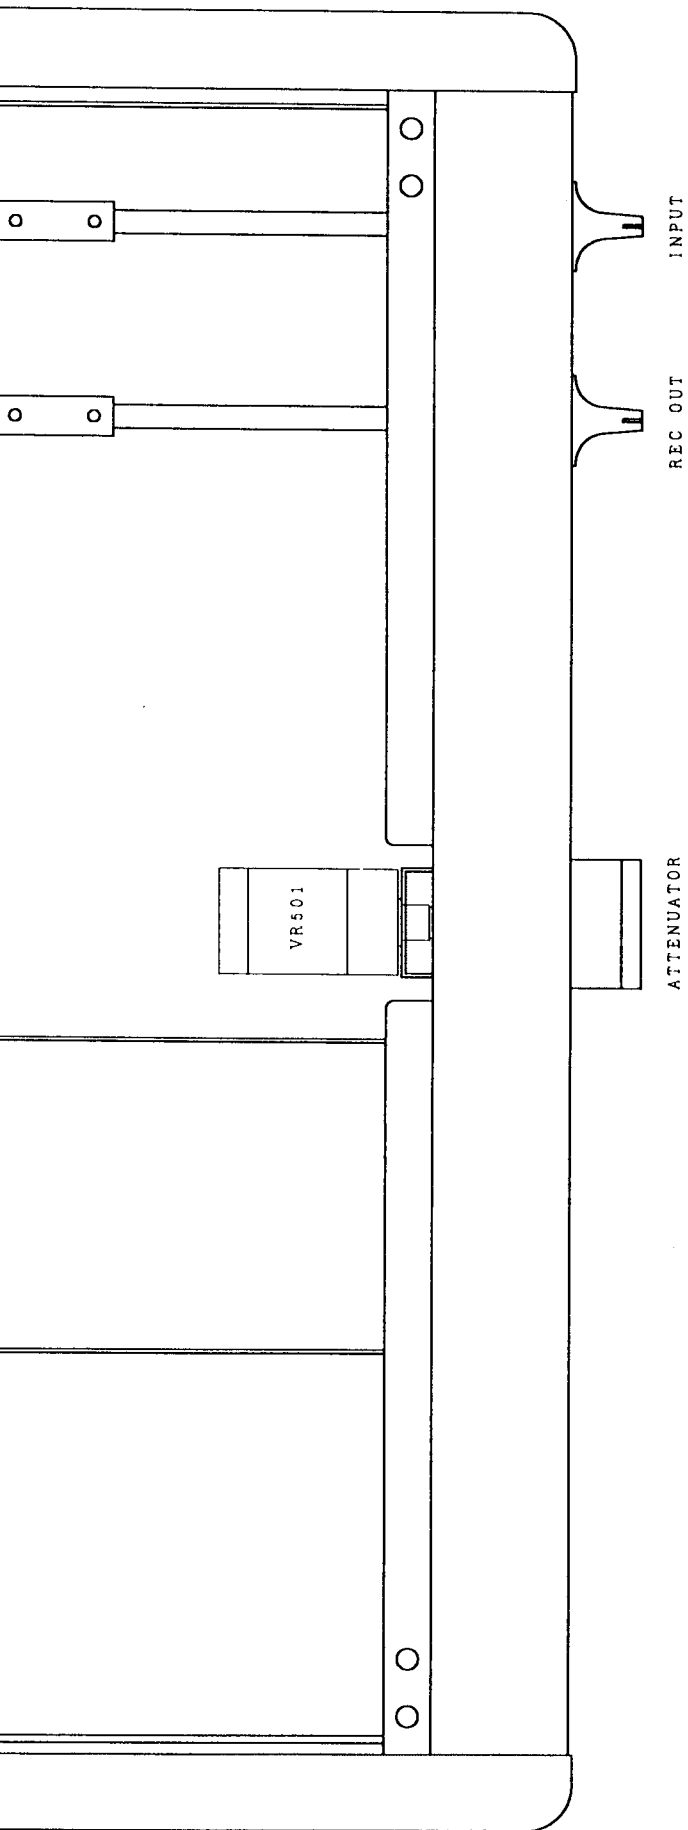


PCB Assembly

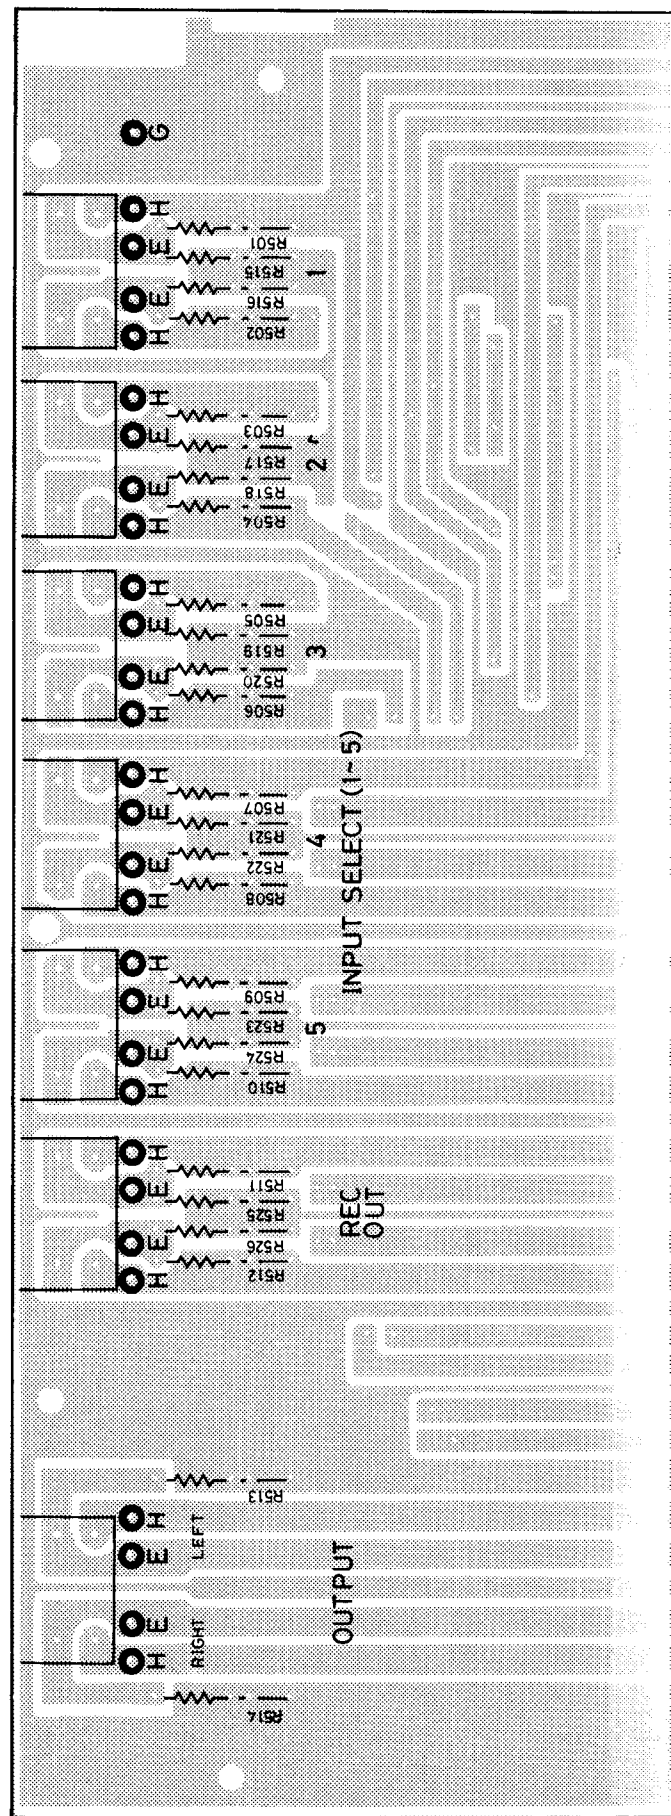


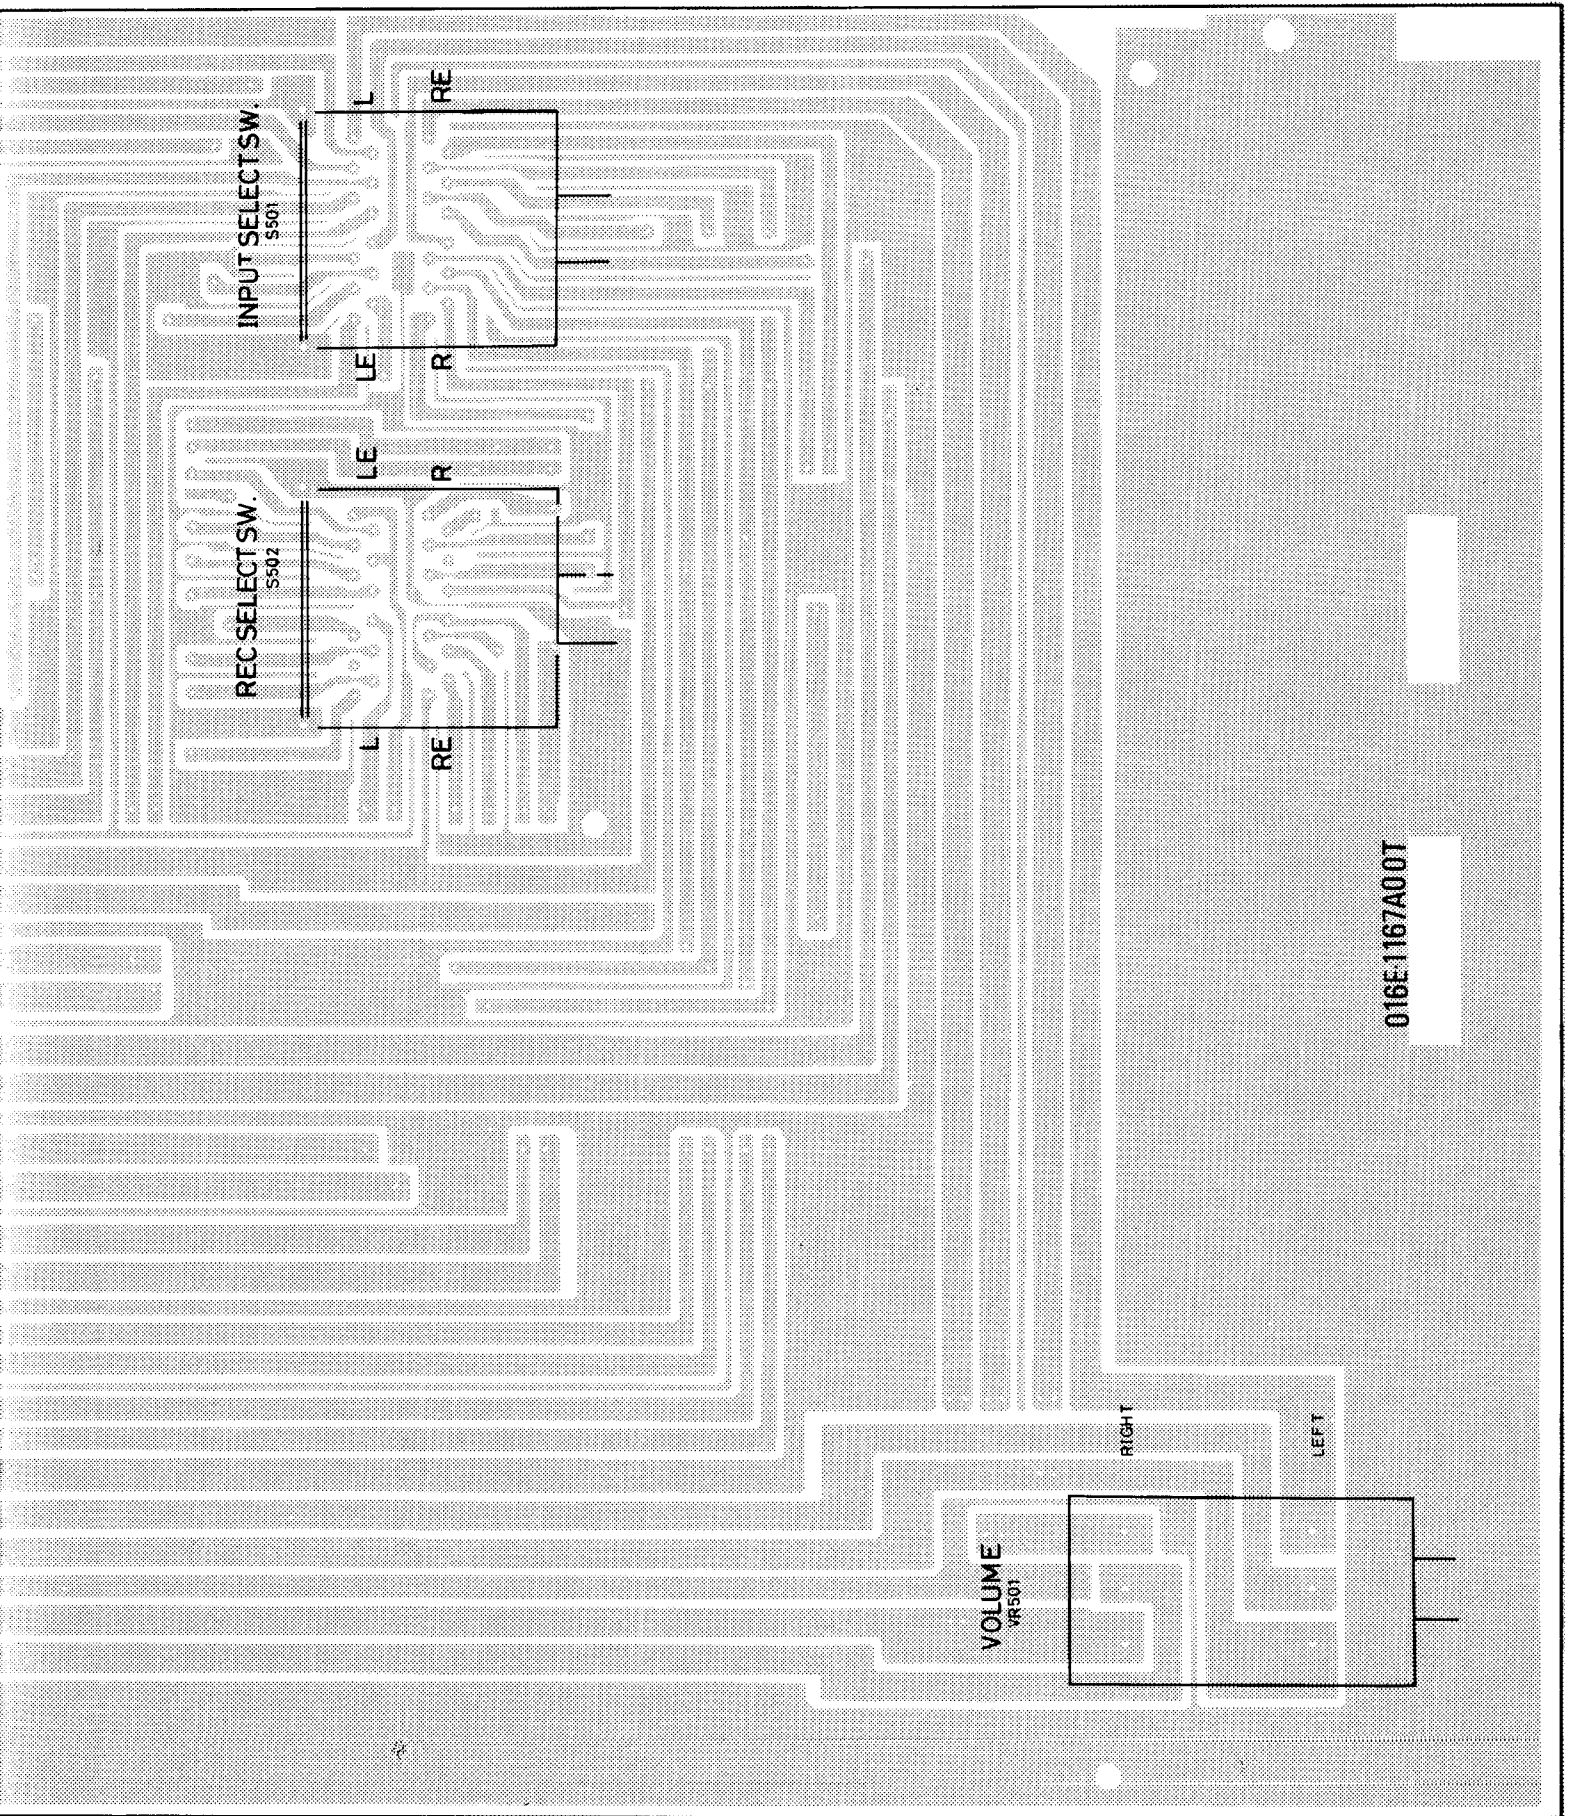

016E1167A00T

Schematic Diagram STEREO PASSIVE CONTROLLER RHC10

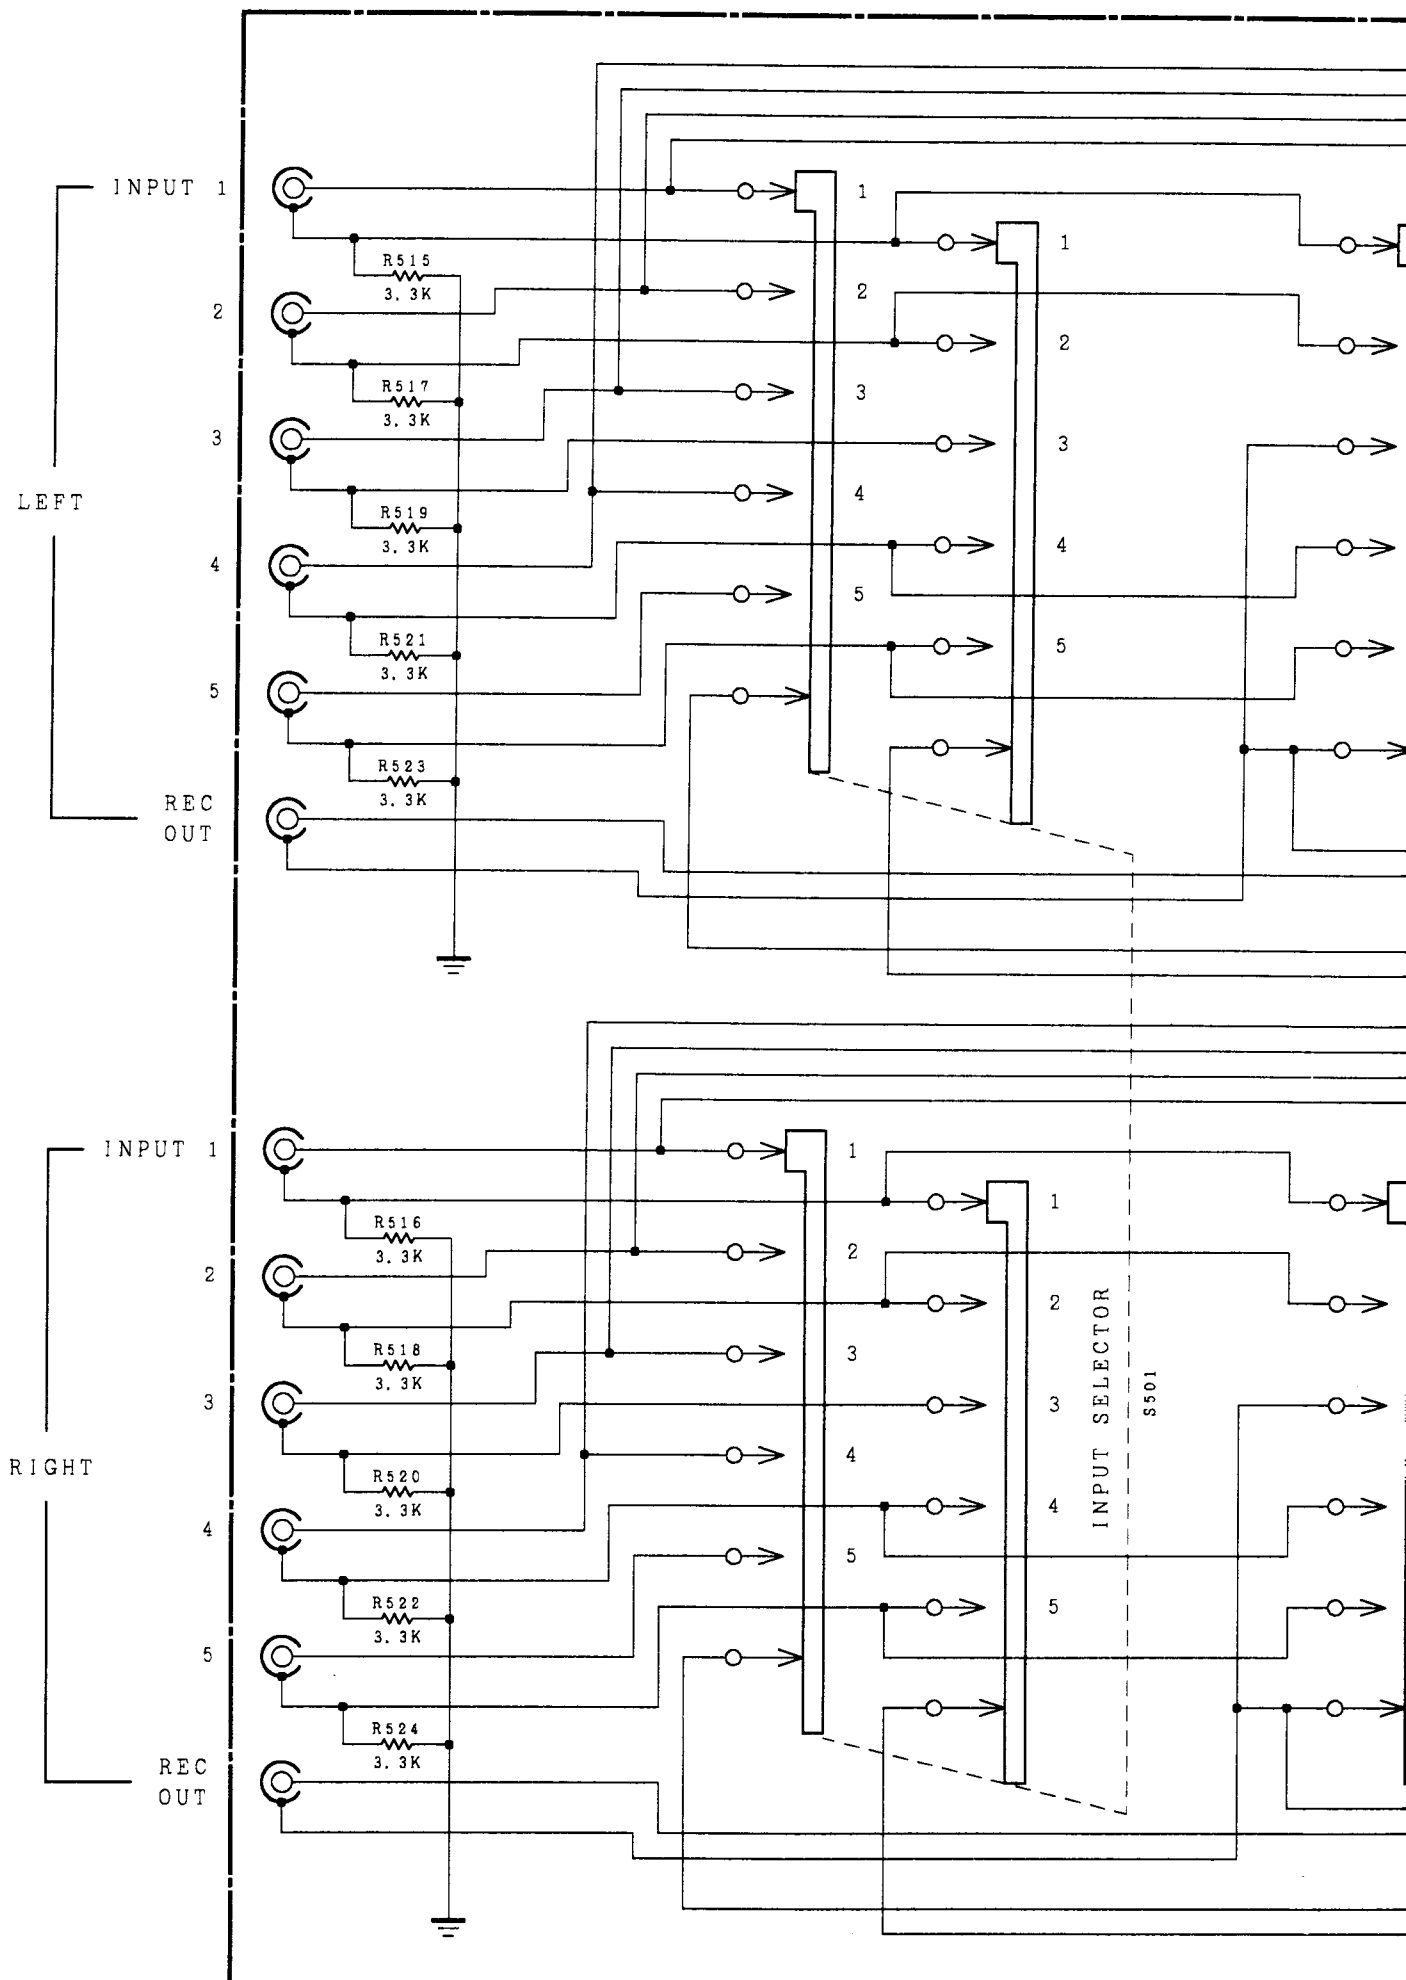

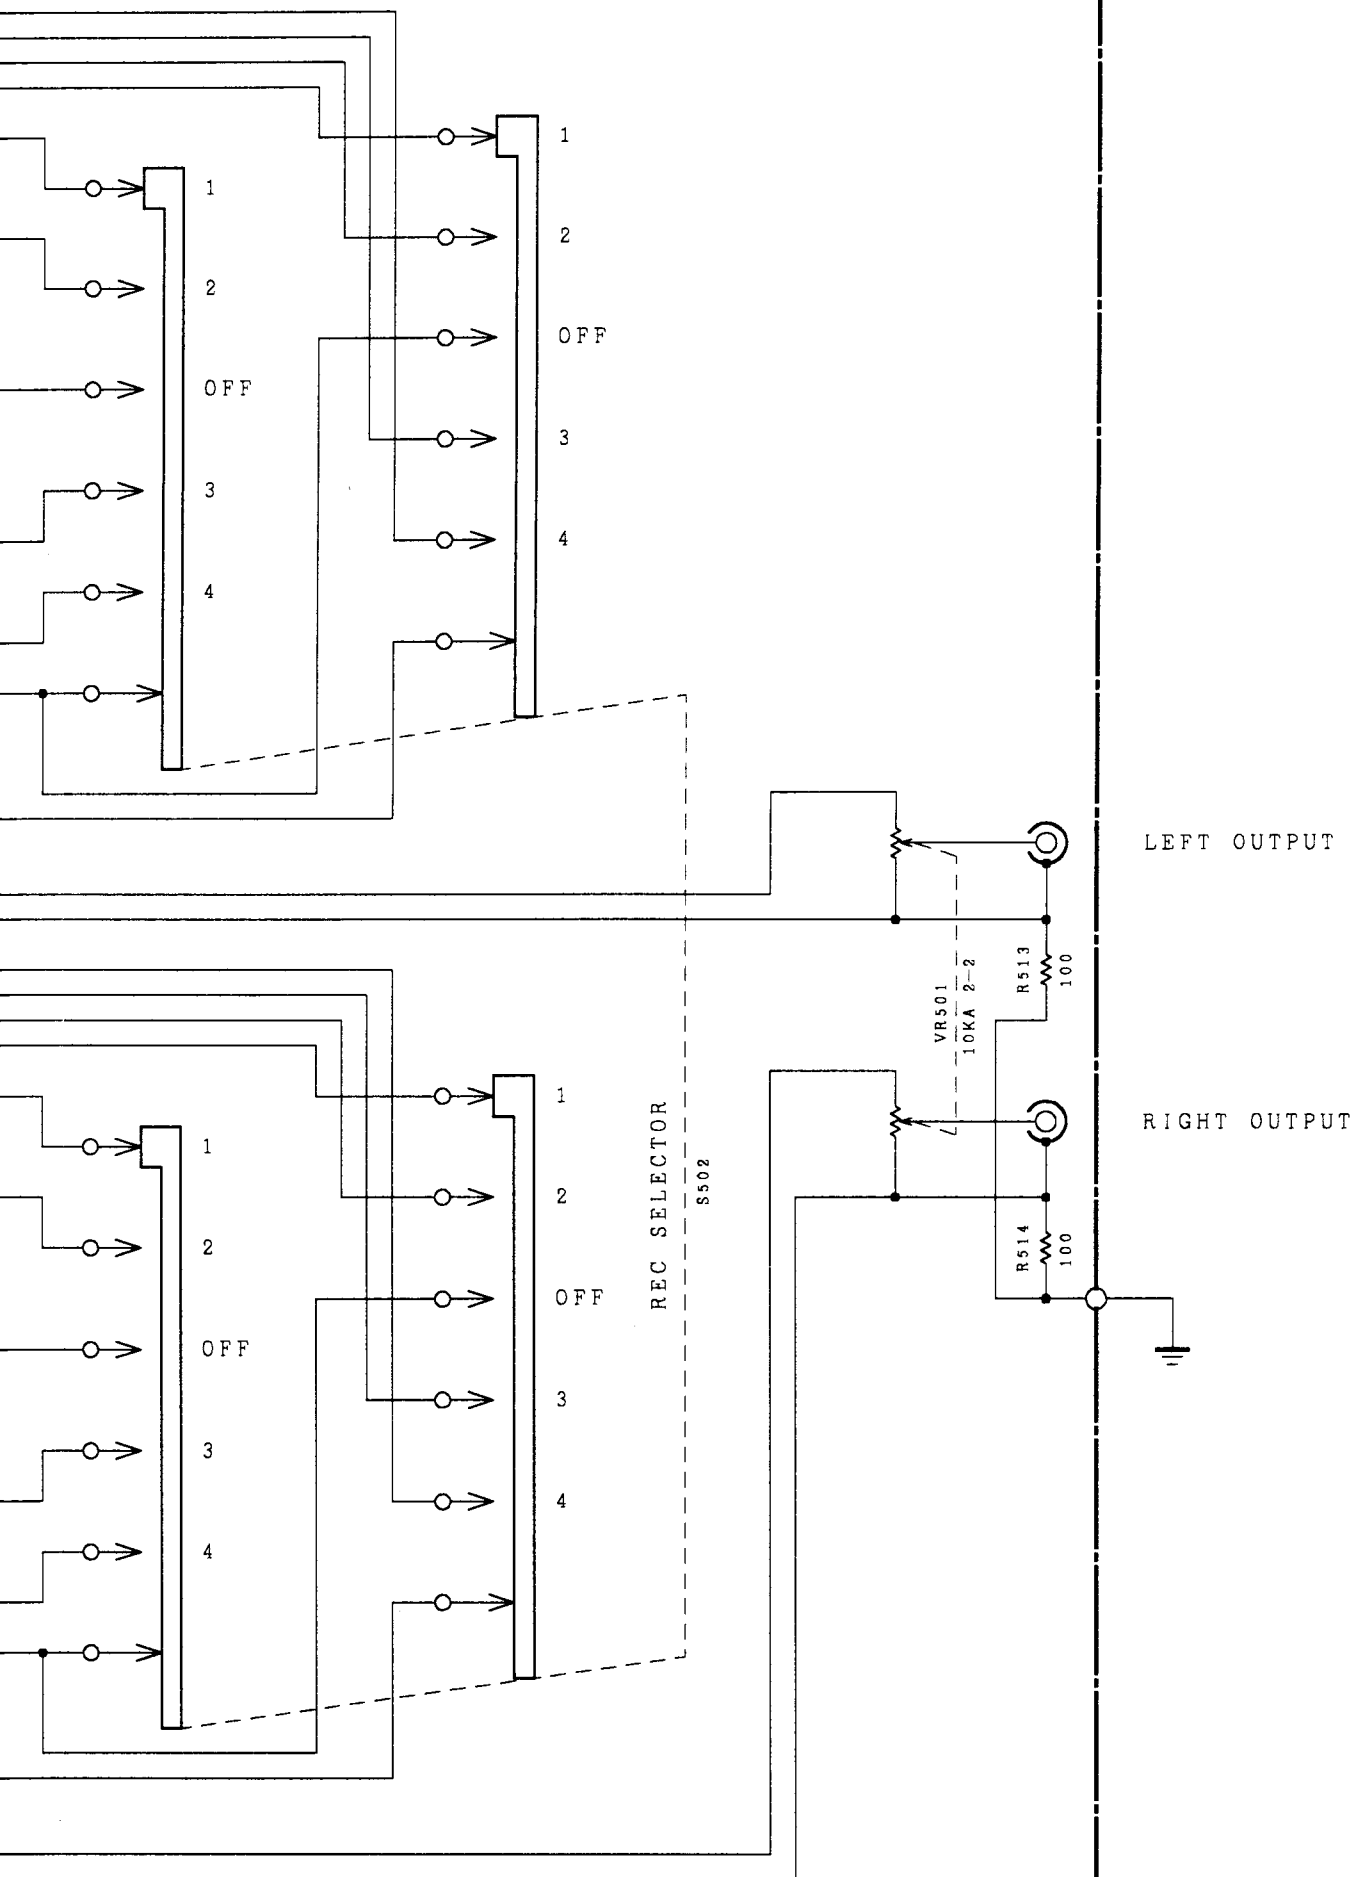

016E-1167A00T